

Telephone:
Fax:

Name: **Manufacturer:** Peugeot
Address: **Model:**
Year: 2000
Registration:
Mileage:
Job number:
Date

Tel - Private:
Tel - Business:
Tel - Mobile

A16	ABS control module
H29	ABS warning lamp
S149	AC master switch
H117	Airbag assembly passenger disable warning lamp
A137	Airbag control module
B182	Airbag side assembly crash sensor, driver
B183	Airbag side assembly crash sensor, passenger
H98	Airbag warning lamp
H110	Airbag warning lamp, side assembly
A23	Alarm system control module
G1	Alternator
H1	Alternator warning lamp
31	Battery -
30	Battery +
S414	Brake fluid level switch
H18	Brake fluid level warning lamp
B12	Brake pad wear sensor, left front
B13	Brake pad wear sensor, right front
H28	Brake pad wear warning lamp
S13	Brake pedal position (BPP) switch
H100	Catalytic converter system warning lamp
A31	Central locking control module
M46	Central locking motor, driver
M48	Central locking motor, passenger
H19	Choke warning lamp
S6	Combination switch
A161	Digital multifunction display
EP10	Earth point location 10
EP3	Earth point location 3
EP4	Earth point location 4
EP5	Earth point location 5
EP9	Earth point location 9
A35	Engine control module (ECM)
S24	Engine coolant blower motor temperature switch
H36	Engine coolant 'low' warning lamp
B24	Engine coolant temperature (ECT) sensor

P4	Engine coolant temperature gauge
B4	Engine coolant temperature gauge sensor
S186	Engine coolant temperature switch
H63	Engine malfunction indicator lamp (MIL)
B86	Engine oil level sensor
H5	Engine oil pressure warning lamp
S25	Engine oil pressure warning lamp switch
P5	Engine oil temperature gauge
B156	Engine oil temperature sensor
B75	Engine speed (RPM) sensor
K2	Fog lamp relay
H20	Fog lamps ON warning lamp, front or single
H135	Fuel filler cap/flap open warning lamp
H91	Fuel filter warning lamp
P3	Fuel gauge
B3	Fuel gauge tank sensor
H15	Fuel 'low' warning lamp
M12	Fuel pump
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-IV	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
A104	Glow plug control module
H25	Glow plug warning lamp
H17	Handbrake ON warning lamp
S35	Handbrake warning lamp switch
H2	Headlamp high beam warning lamp
H55	Headlamp low beam ON warning lamp
15	Ignition switch - ignition ON
A162	Immobilizer control module
H109	Immobilizer warning lamp
H6	Indicator warning lamp, left or single
H7	Indicator warning lamp, right
R4	Instrument illumination rheostat
A5	Instrument panel
E11	Instrument panel lamp(s)
A75	Instrumentation control module
A11	Multifunction control module
H21	Rear fog lamps ON warning lamp
A171	Relay module
S123	Seat belt contact switch, driver
A97	Seat belt presenter control module
H32	Seat belt warning lamp
A198	Supplementary restraint system (SRS) control module
P7	Tachometer
H27	Transmission shift warning lamp(s)
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.



