

Telephone:
Fax:

M62	AC air mix control motor
Y11	AC compressor clutch
K143	AC compressor clutch relay
A163	AC compressor control module
A63	AC control module
B53	AC evaporator temperature sensor
M59	AC recirculation motor
S341	AC refrigerant triple pressure switch
M7	AC/heater blower motor
31	Battery -
30	Battery +
S6	Combination switch
X1	Data link connector (DLC)
A35	Engine control module (ECM)
M6-I	Engine coolant blower motor 1
M6-II	Engine coolant blower motor 2
A95	Engine coolant blower motor control module
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
K12-III	Engine coolant blower motor relay 3
S47	Engine coolant 'hot' warning lamp switch
B24	Engine coolant temperature (ECT) sensor
B4	Engine coolant temperature gauge sensor
F	Fuse
K28	Heater blower relay
A91	Heater function control module
B162	Heater radiator temperature sensor
15	Ignition switch - ignition ON
B37	In-car temperature sensor
R4	Instrument illumination rheostat
A5	Instrument panel
B61	Outside air temperature sensor
W11	Spare cable
H111	Stop engine warning lamp

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the

harness connector.

